

# **Illustrated Parts List**

## **Model Series**

# **120400**

TYPE NUMBERS  
0023 through 0242.

For Use On Engines Built Before Date Code – 03010100

### **TABLE OF CONTENTS**

Air Cleaner .....	8
Blower Housing/Shrouds .....	9
Cams .....	3
Carburetor .....	5
Controls .....	6
Crankcase Cover/Sump .....	2
Crankshaft .....	3
Cylinder .....	2
Electric Starter .....	10
Flywheel .....	9
Fuel Tank .....	6
Gear Reducer .....	10
Governor Spring .....	7
Head .....	4
Ignition .....	7
Kits/Gaskets – Carburetor .....	5
Kits/Gaskets – Engine .....	2
Kits/Gaskets – Valve .....	4
Muffler .....	8
Oil .....	10
Piston Group .....	3
Rewind .....	9
Valves .....	4

**BRIGGS & STRATTON**

(R)

PRINTED IN U.S.A.









COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted,  
in any form or by any means, electronic or mechanical, including photocopying,  
recording or by any information storage and retrieval system, without permission  
in writing from Briggs & Stratton Corporation.

# 120400

1019 LABEL KIT


1019A LABEL KIT

1058 OWNER'S MANUAL

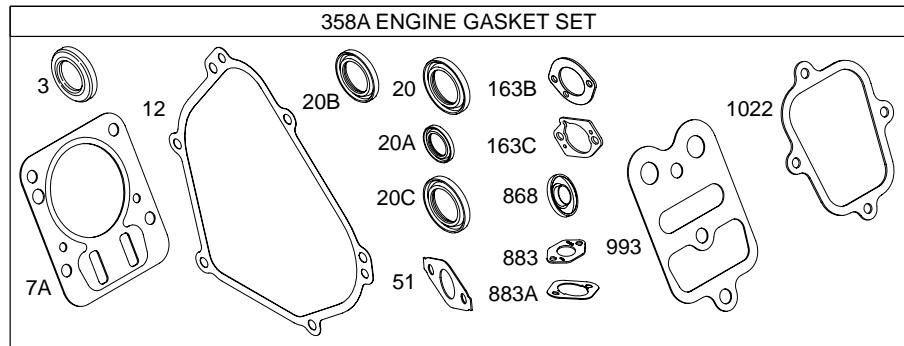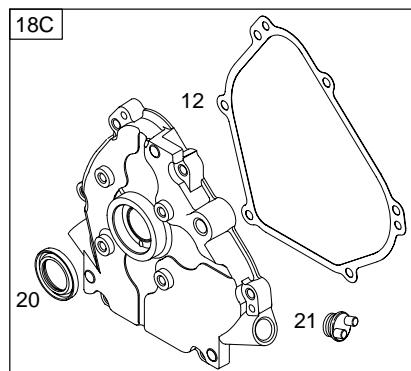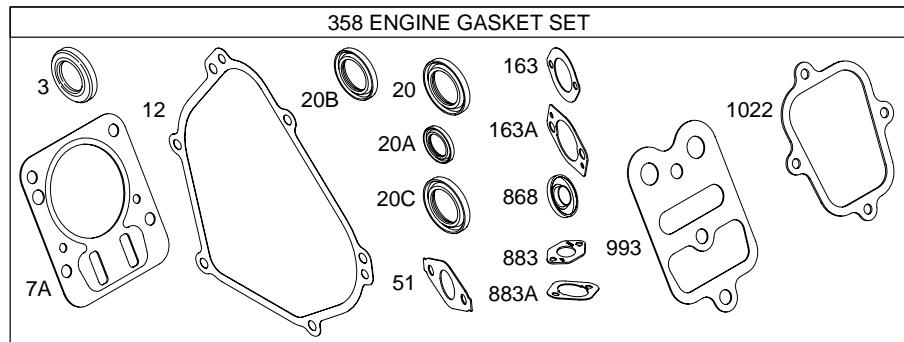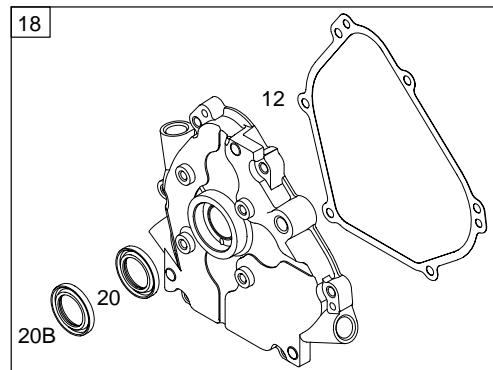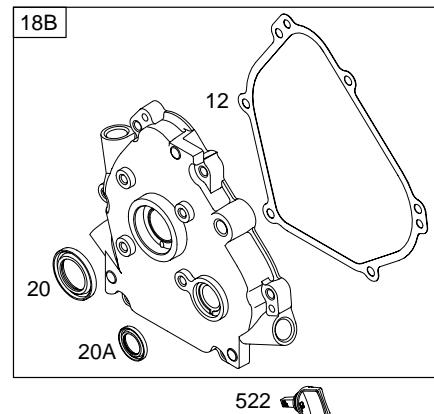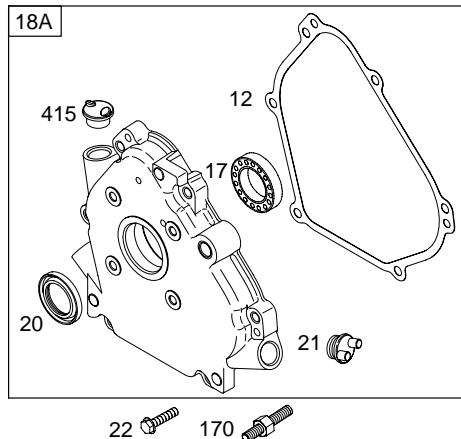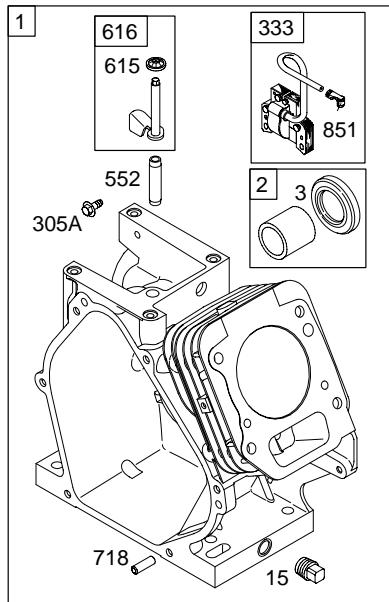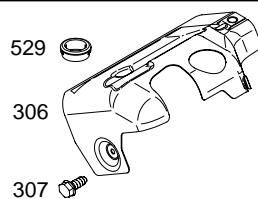


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
6217-2 Assemblies include all parts shown in frames.

7C-1/2003

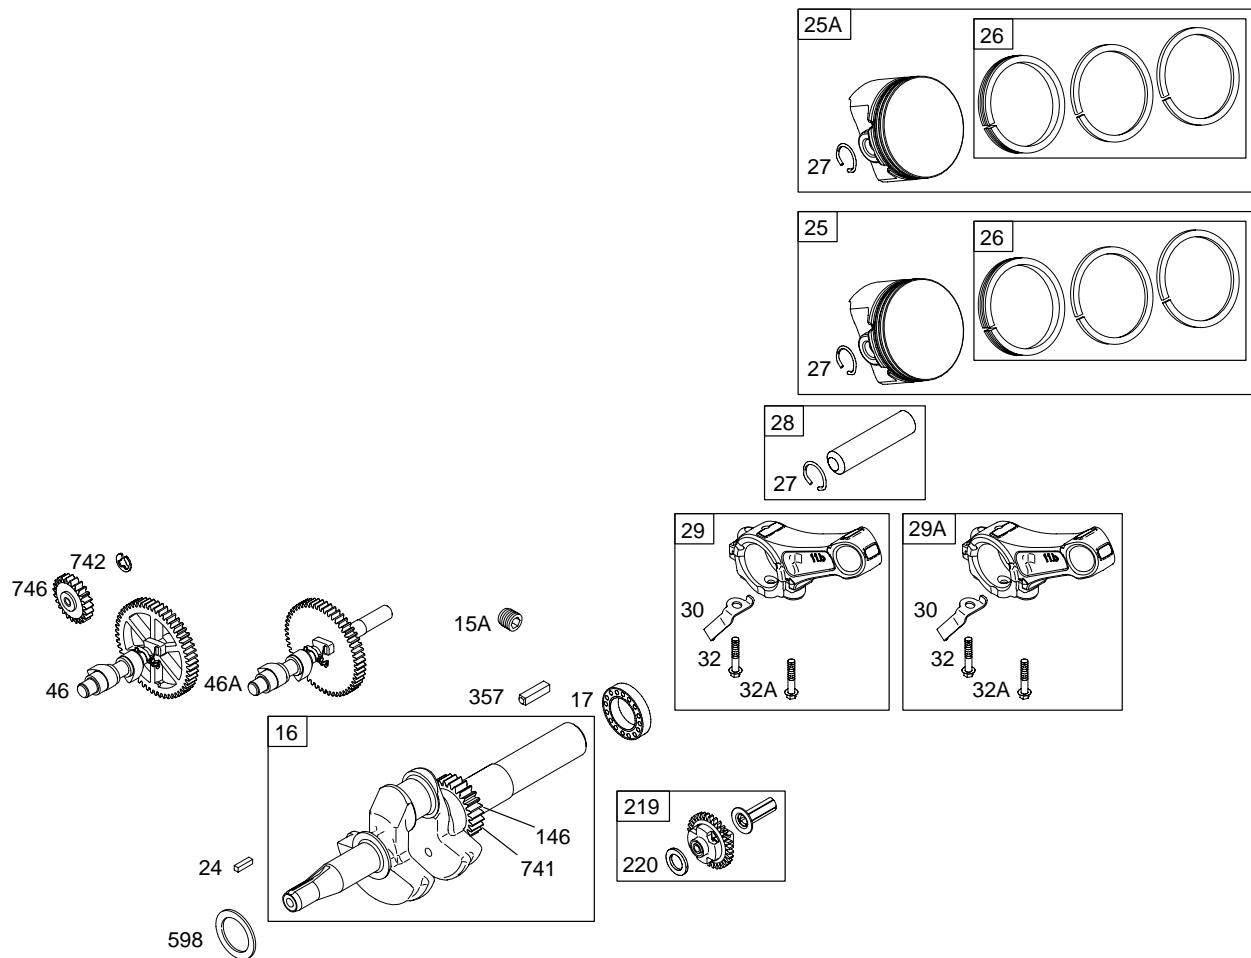

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6217-3 Assemblies include all parts shown in frames.*


7C-1/2003

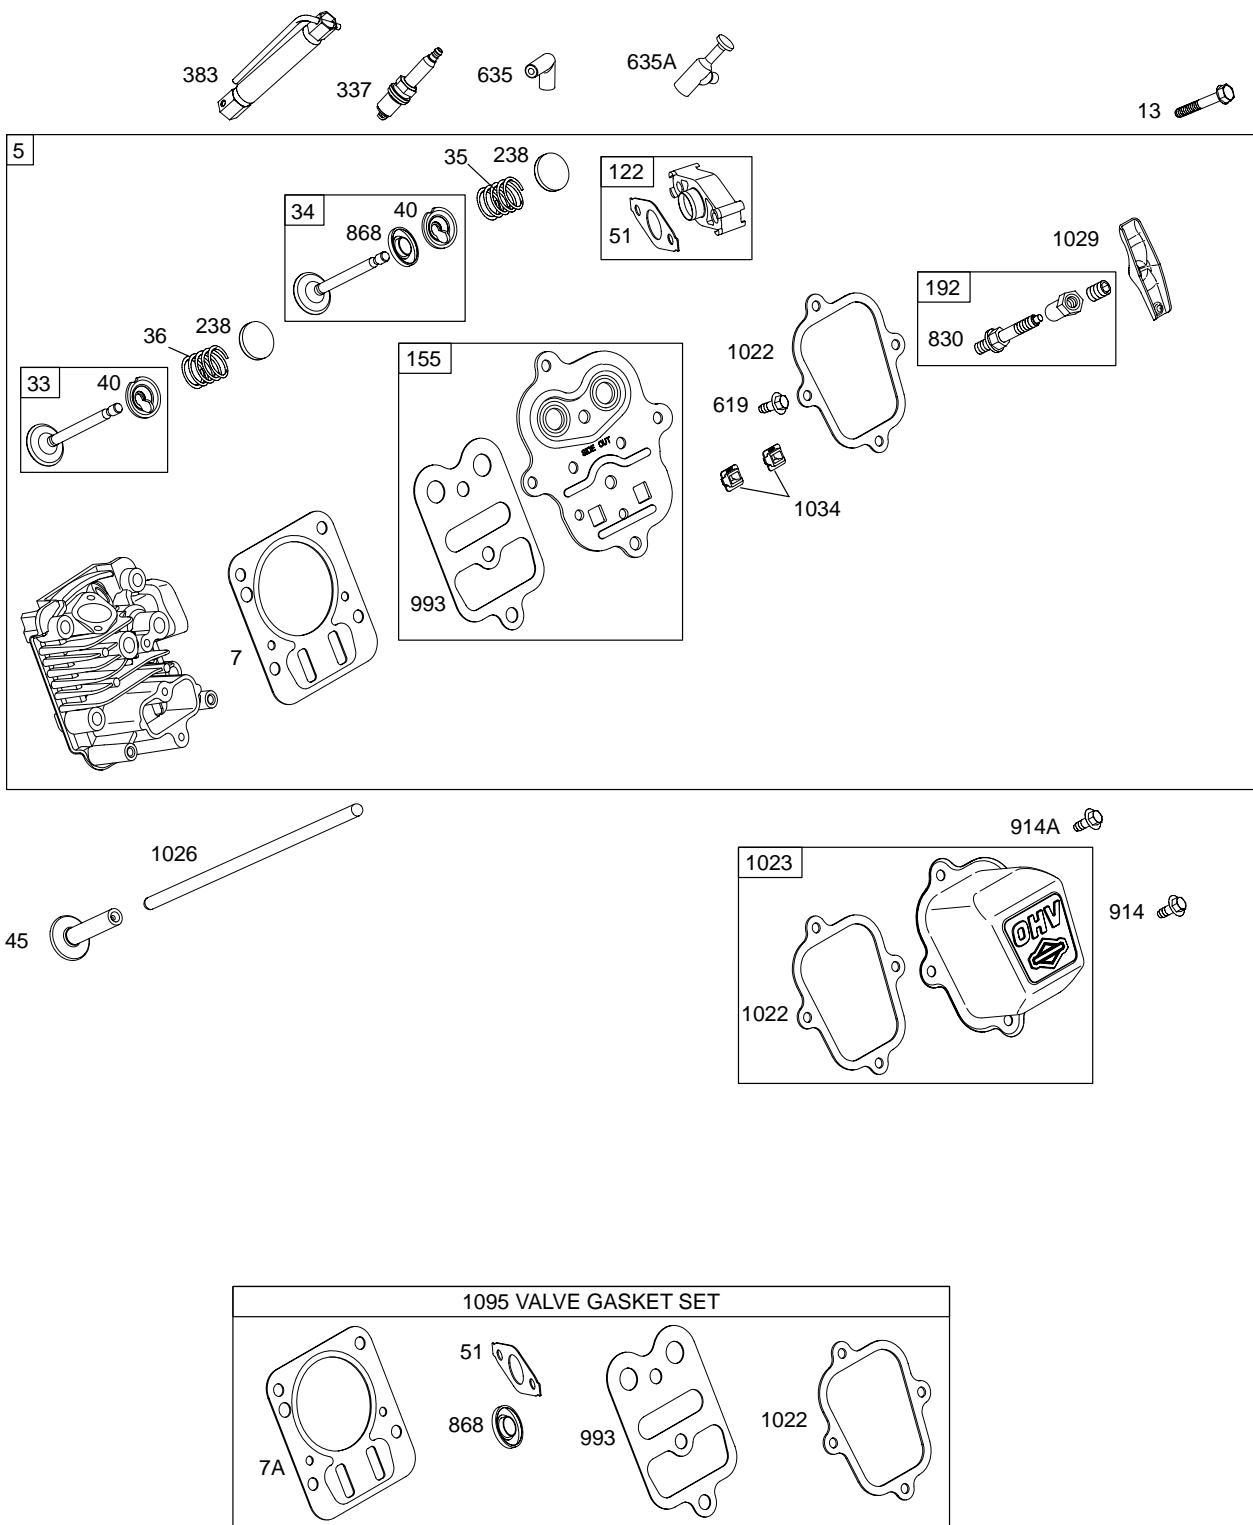


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6217-4 Assemblies include all parts shown in frames.*

7C-1/2003


**NOTE: This Illustration Represents A Number Of Different Carburetors.  
Parts Shown May Not Be Included In All Kits**

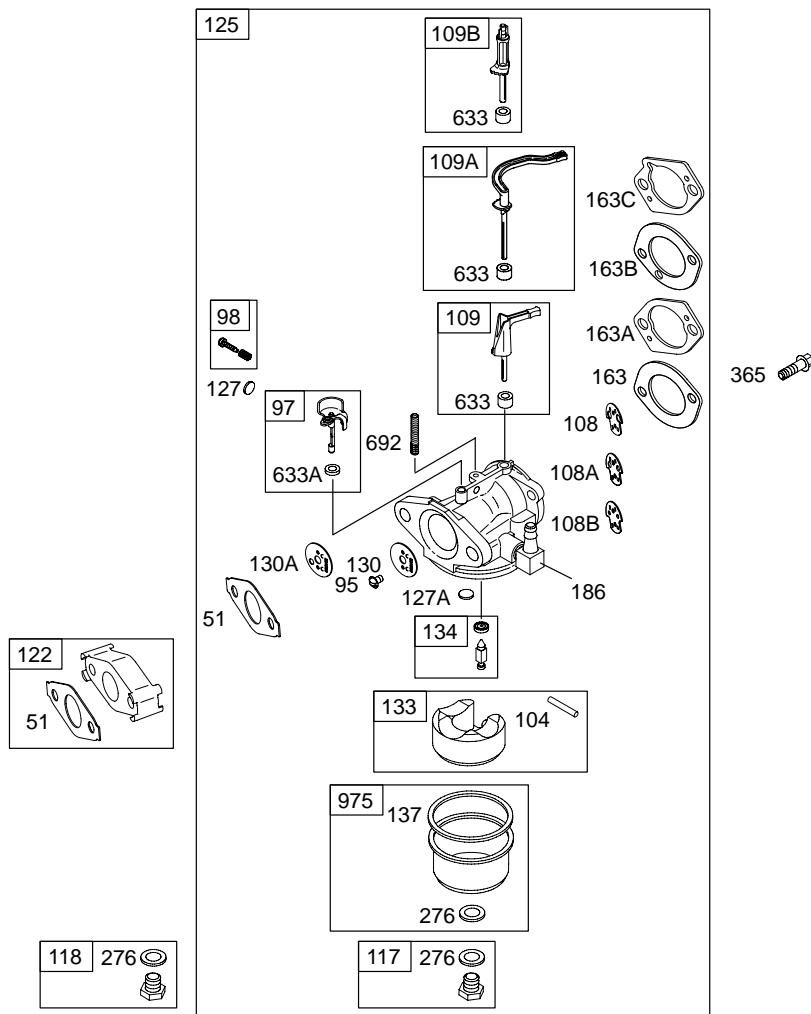


## **121 CARBURETOR OVERHAUL KIT**

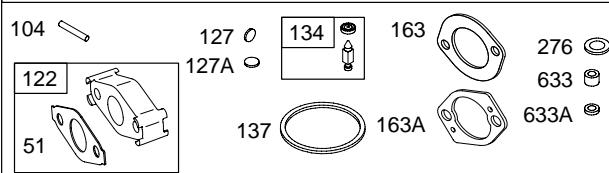


## **121A CARBURETOR OVERHAUL KIT**

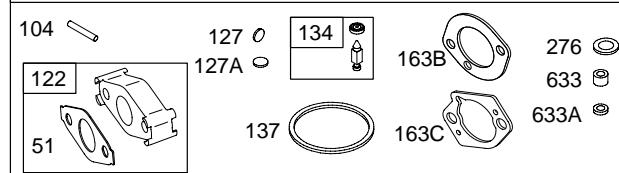



#### **977 CARBURETOR GASKET SET**

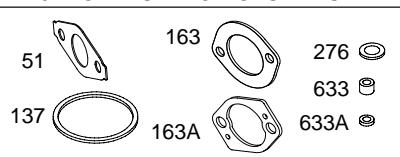

977A CARBURETOR GASKET SET

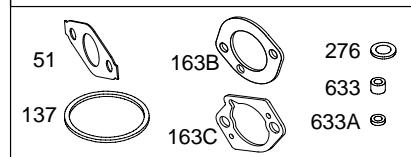


**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
6217-5 Assemblies include all parts shown in frames. 7C-1/2003

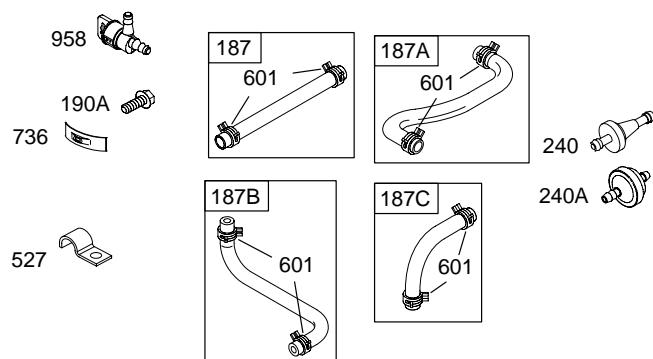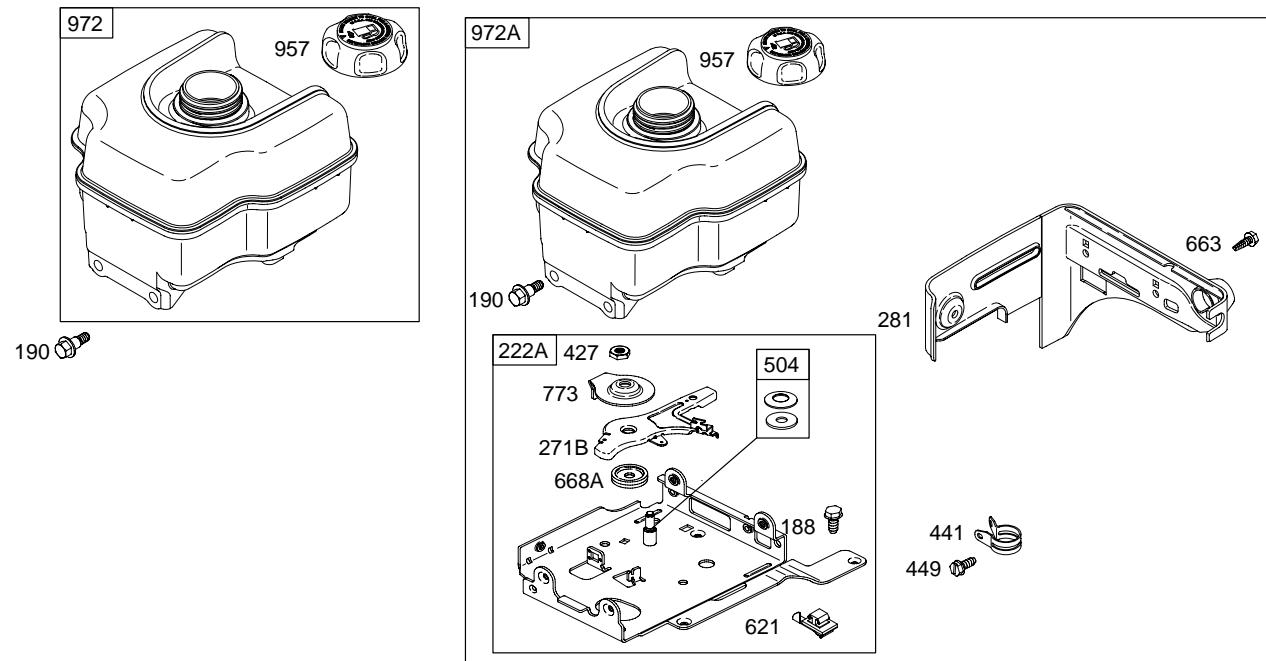



*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6217-6 Assemblies include all parts shown in frames.*

7C-1/2003

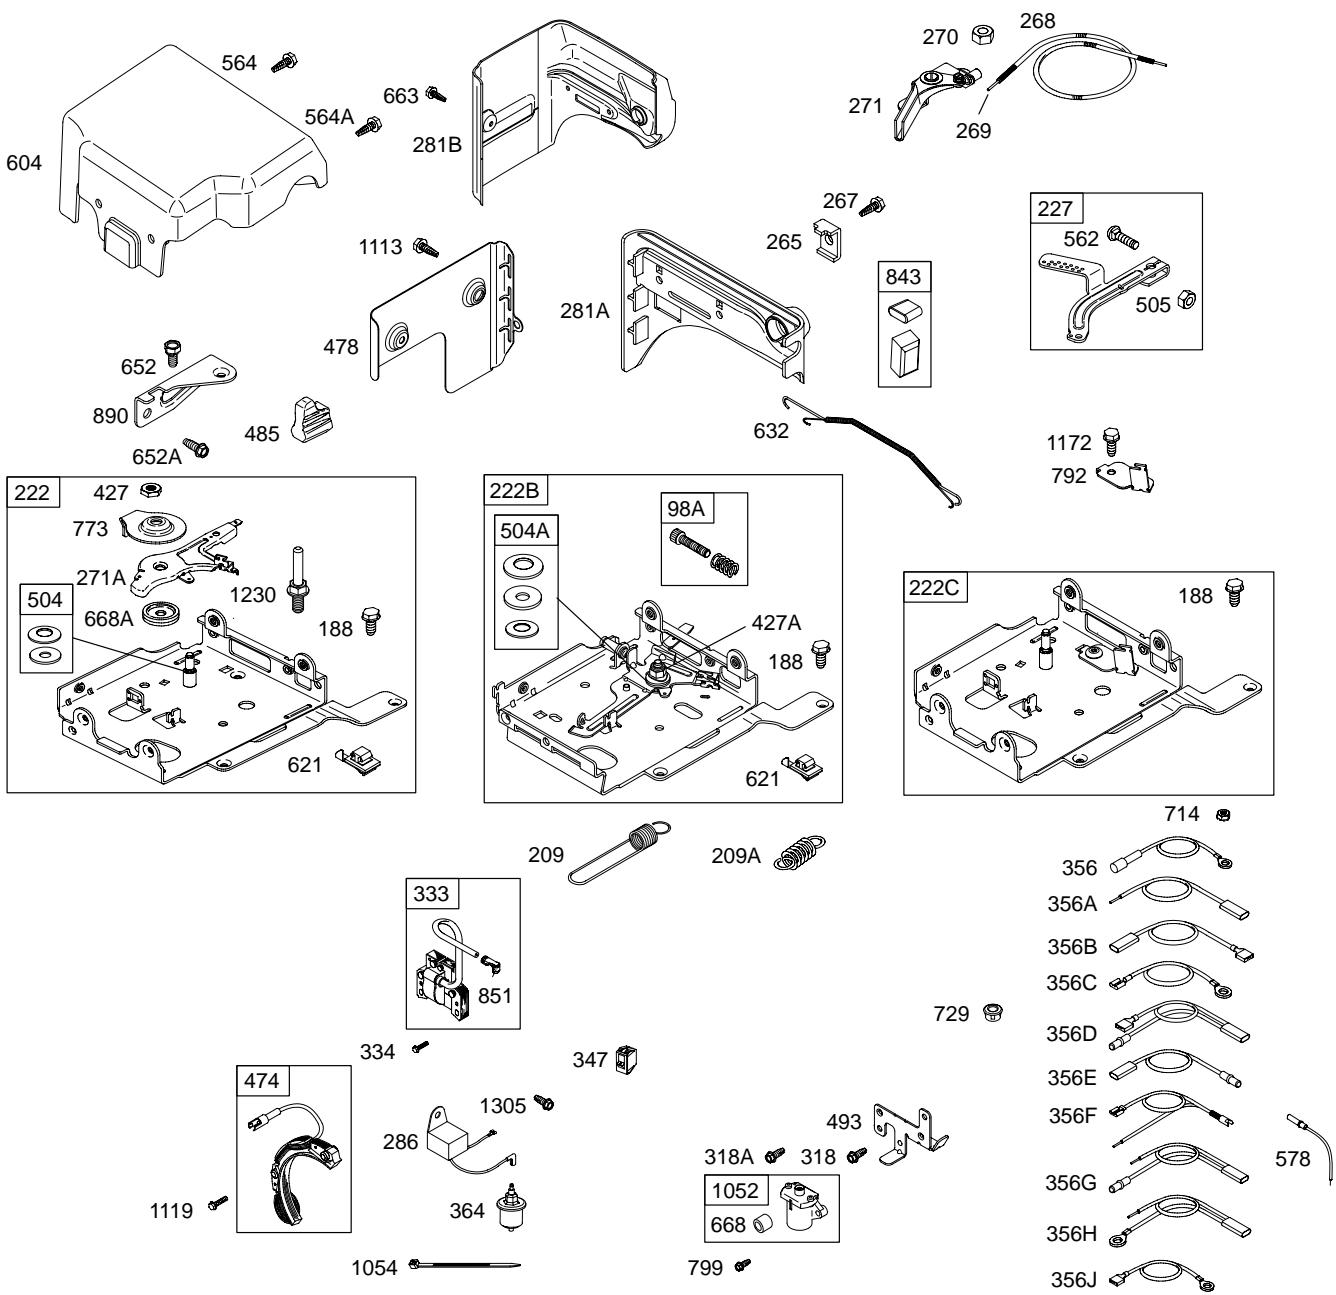




**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
6217-7 Assemblies include all parts shown in frames.

7C-1/2003

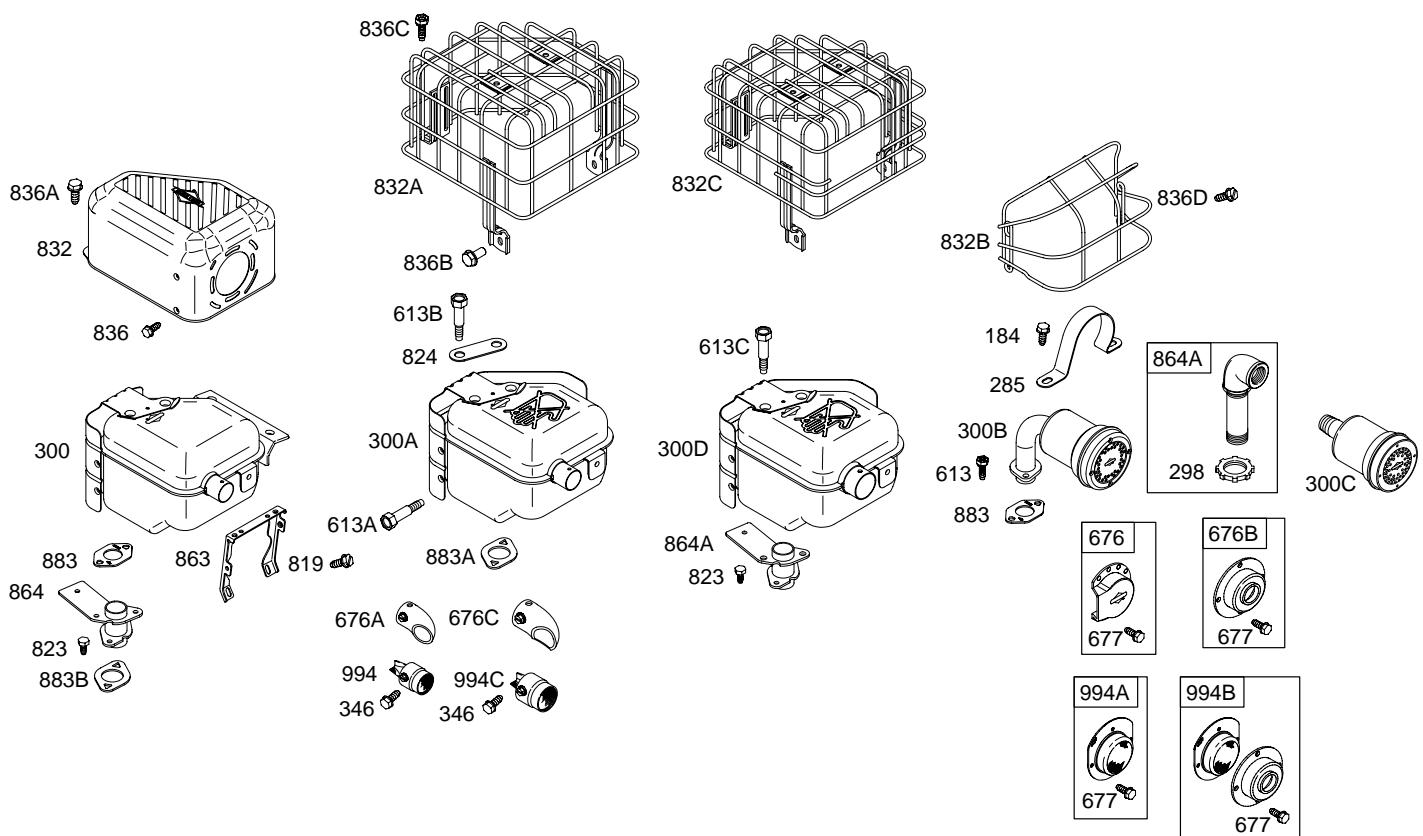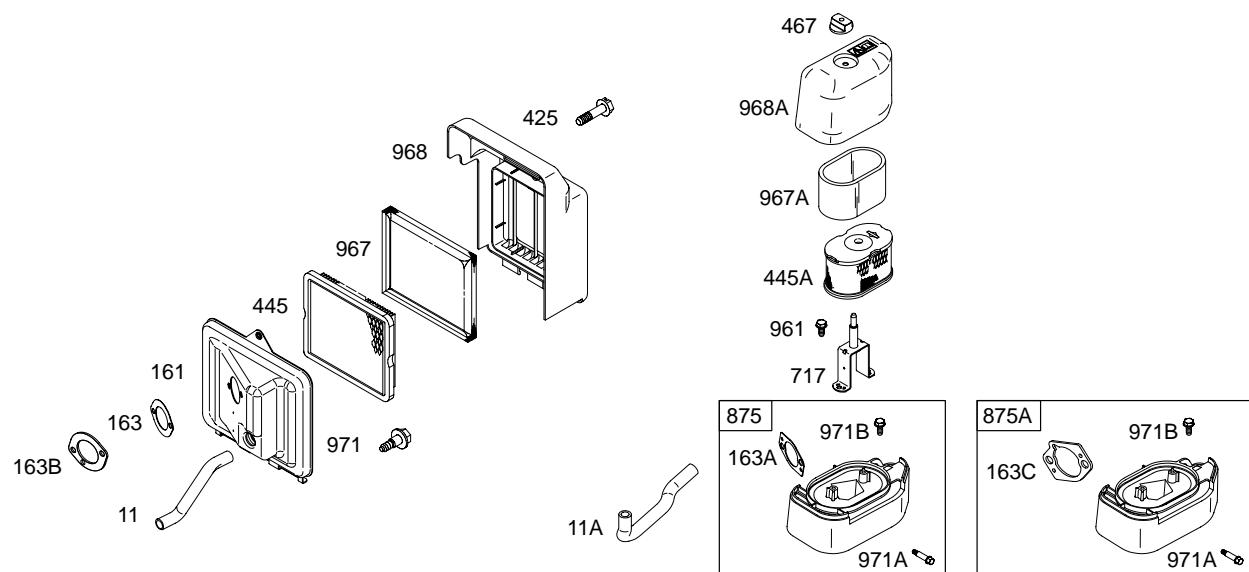

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
6217-8 Assemblies include all parts shown in frames.*


7C-1/2003

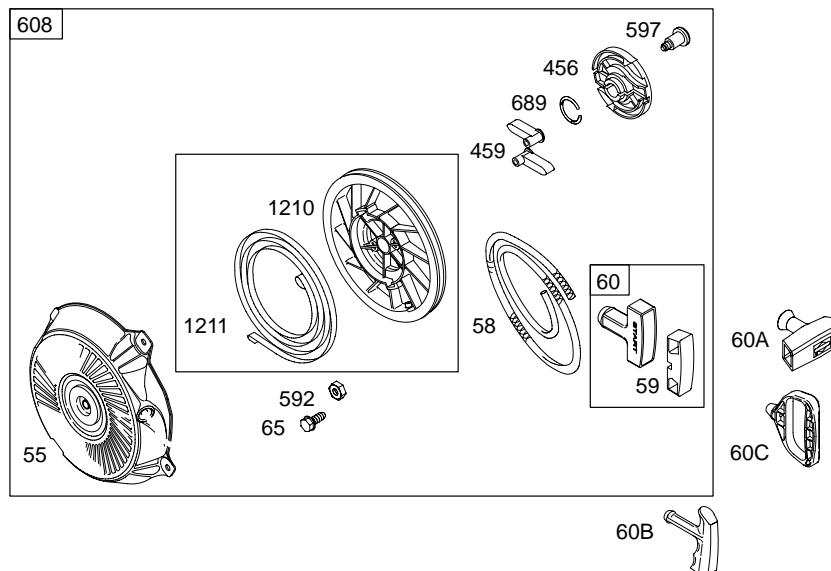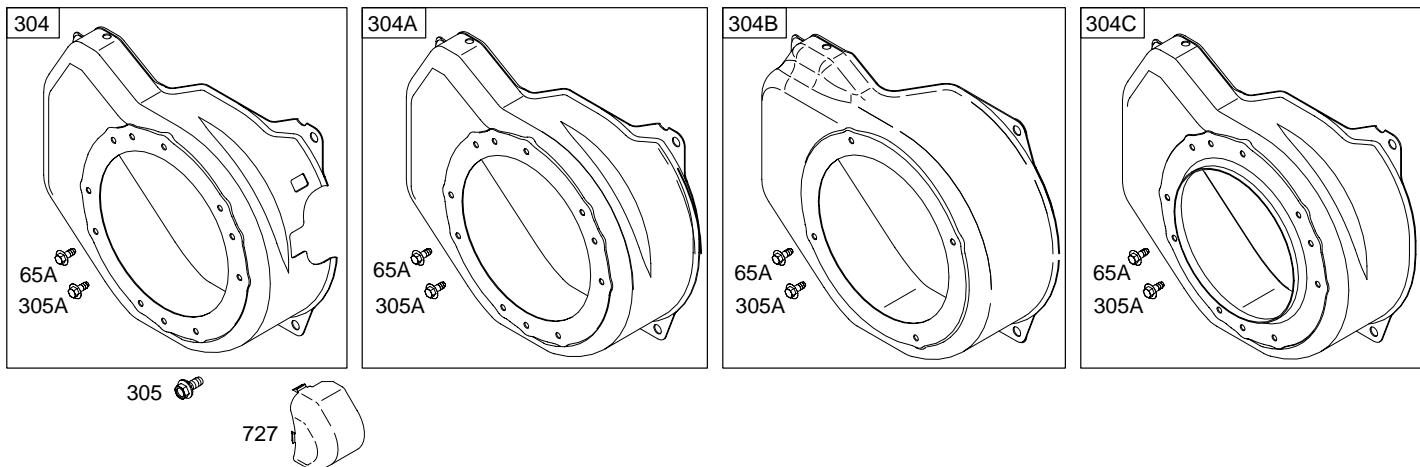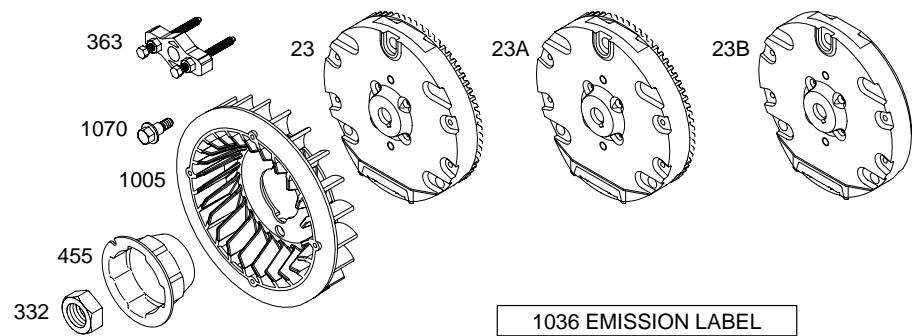


*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
6217-9 Assemblies include all parts shown in frames.

7C-1/2003

120400

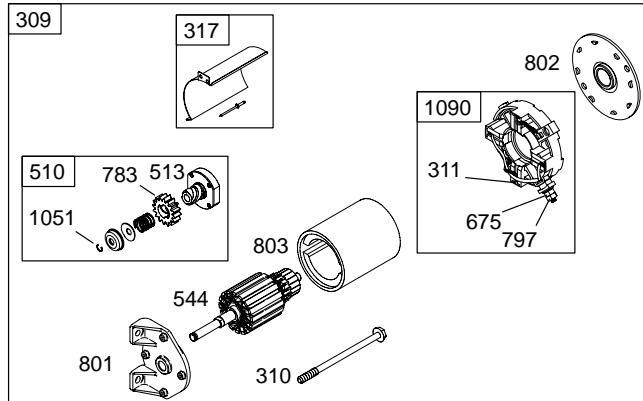

697

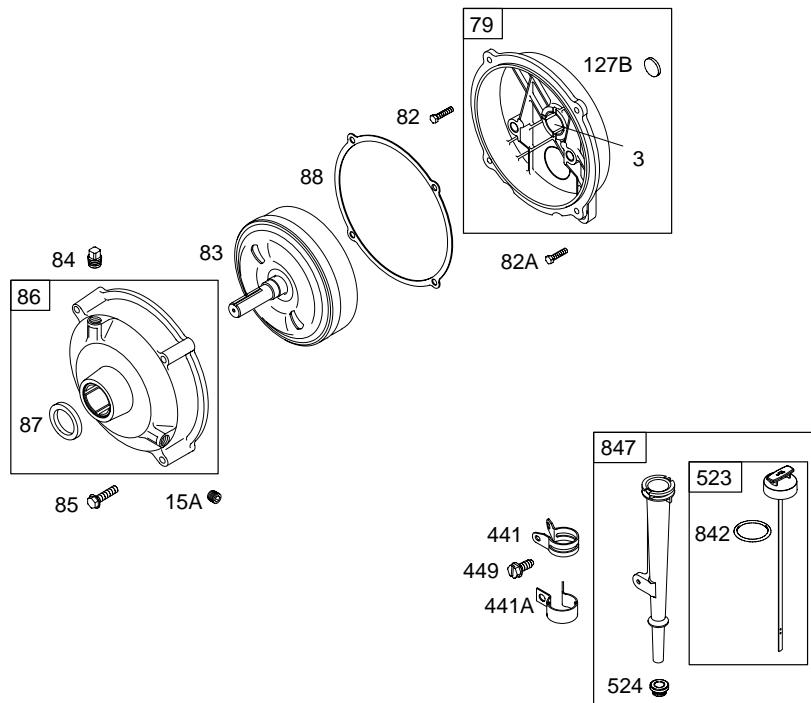

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	693811	Cylinder Assembly (Used Before Code Date 02011500).  —— Note —— 698223 Cylinder Assembly (Used Before Code Date 02101700 and After Code Date 02011400). 698485 Cylinder Assembly (Used After Code Date 02101600). 694470 Cylinder Assembly Used on Type No(s). 0121, 0130.			695763 Crankshaft Used on Type No(s). 0124. 693595 Crankshaft Used on Type No(s). 0242.  17    692517    Bearing-Ball 18    693204    Cover-Crankcase  —— Note —— 694466 Cover-Crankcase Used on Type No(s). 0109, 0213.	25A	690021	Piston Assembly (Standard)  —— Note —— 694167 Piston Assembly (.010" Oversize) 694168 Piston Assembly (.020" Oversize) 694169 Piston Assembly (.030" Oversize)
2	399269	Kit-Bushing/Seal (Magneto Side)	18A	693605	Cover-Crankcase Used on Type No(s). 0036.	26	499631	Ring Set (Standard)  —— Note —— 692785 Ring Set (.010" Oversize) 692786 Ring Set (.020" Oversize) 692787 Ring Set (.030" Oversize)
3	*299819	Seal-Oil (Magneto Side)	18B	694833	Cover-Crankcase Used on Type No(s). 0119, 0127.	27	691866	Lock-Piston Pin
5	693643	Head-Cylinder	18C	695290	Cover-Crankcase (Used After Code Date 11080200. Used on Type No(s). 0137.	28	499423	Pin-Piston
7	698210	Gasket-Cylinder Head	20	*692550	Seal-Oil (PTO Side)	29	690124	Rod-Connecting
11	692600	Tube-Breather (Flat Panel Air Cleaner)	20A	*691952	Seal-Oil (PTO Side) (Auxiliary PTO)	30	692562	Dipper-Connecting Rod
11A	693647	Tube-Breather (High Mount Air Cleaner)	20B	*694171	Seal-Oil (PTO Side) Used on Type No(s). 0120, 0135, 0137.	32	691664	Screw (Connecting Rod)
12	*692549	Gasket-Crankcase	21	281658	Cap-Oil Fill	32A	695759	Screw (Connecting Rod) (Used After Code Date 00042200).
13	691137	Screw (Cylinder Head)	22	692551	Screw (Crankcase Cover/Sump)	33	499642	Valve-Exhaust
15	691686	Plug-Oil Drain (Square Head)	23	694902	Flywheel Used on Type No(s). 0121.	34	499641	Valve-Intake
15A	691682	Plug-Oil Drain (Flush)	23A	695298	Flywheel Used on Type No(s). 0130.	35	691304	Spring-Valve (Intake)
16	693887	Crankshaft  —— Note —— 693403 Crankshaft Used on Type No(s). 0036, 0131. 695237 Crankshaft Used on Type No(s). 0120, 0145.	23B	692987	Flywheel	36	691304	Spring-Valve (Exhaust)
			24	222698	Key-Flywheel			

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

Ø Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
**6217-11**      Assemblies include all parts shown in frames.      **7C-1/2003**

# 120400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
40	692194	Retainer—Valve	109	690023	Shaft—Choke (Straight Handle)			694176 Jet—Main (High Altitude)
45	690977	Tappet—Valve	109A	693628	Shaft—Choke Used on Type No(s). 0109, 0119, 0124, 0213.			(Used After Code Date 02103100).
46	693404	Camshaft						Used on Type No(s). 0109, 0119, 0124, 0213.
46A	694831	Camshaft						694975 Jet—Main (High Altitude)
		———— Note ——	117	694176	Jet—Main (Standard) (Used Before Code Date 02100800).			Used on Type No(s). 0109, 0119, 0124, 0213.
		695285 Camshaft Used on Type No(s). 0127.			———— Note ——			695042 Jet—Main (High Altitude)
51*•••692555		Gasket—Intake (2 Required)			690048 Jet—Main (Standard) (Used After Code Date 02100700).			Used on Type No(s). 0120, 0133, 0135, 0137, 0138.
55	691422	Housing—Rewind Starter			690048 Jet—Main (Standard) (Used Before Code Date 02110100).			695042 Jet—Main (High Altitude)
58	693389	Rope—Starter (Cut to Required Length)			Used on Type No(s). 0109, 0119, 0124, 0213.			Used on Type No(s). 0145.
59	805957	Insert—Grip			698344 Jet—Main (Standard) (Used After Code Date 02103100).			121 695157 Kit—Carburetor Overhaul
60	715257	Grip—Starter Rope (2 Piece)			Used on Type No(s). 0109, 0119, 0124, 0213.			121A 696998 Kit—Carburetor Overhaul (High Vent)
60C	695740	Grip—Starter—Rope			498976 Jet—Main (Standard) (Used After Code Date 02100800).			122 •693749 Spacer—Carburetor
		Used on Type No(s). 0139.			Used on Type No(s). 0145.			125 694174 Carburetor (Used Before Code Date 02100800).
65	690837	Screw (Rewind Starter)			498976 Jet—Main (Standard) (Used Before Code Date 02100800).			———— Note ——
65A	692608	Screw (Rewind Starter)			691428 Jet—Main (Standard) (Used After Code Date 02110100).			698474 Carburetor (High Vent)
79	694511	Case—Gear Reduction			Used on Type No(s). 0109, 0119, 0124, 0213.			(Used After Code Date 02100700).
82	690369	Screw (Gear Reduction Case)			498976 Jet—Main (Standard) (Used Before Code Date 02100800).			693518 Carburetor (Used Before Code Date 02110100).
82A	691122	Screw (Gear Reduction Case)			691428 Jet—Main (Standard) (Used After Code Date 02100800).			Used on Type No(s). 0109, 0119, 0124, 0213.
83	690374	Shaft—Auxiliary Drive			498976 Jet—Main (High Altitude) (Used Before Code Date 02100800).			698475 Carburetor (High Vent)
84	691121	Plug—Breather			———— Note ——			(Used After Code Date 02103100).
85	692551	Screw (Gear Cover to Gear Reduction Case)			498976 Jet—Main (High Altitude) (Used After Code Date 02100700).			Used on Type No(s). 0109, 0119, 0124, 0213.
86	690608	Cover—Gear			498976 Jet—Main (Standard) (Used Before Code Date 02100800).			694508 Carburetor Used on Type No(s). 0120, 0133, 0135, 0137, 0138.
87	691582	Seal—Gear Reduction			498977 Jet—Main (High Altitude) (Used Before Code Date 02110100).			0120, 0133, 0135, 0137, 0138.
88	691600	Gasket—Gear Reduction Cover			498977 Jet—Main (High Altitude) (Used After Code Date 02100700).			127 •691739 Plug—Welch (5/16" Diameter)
95	691636	Screw (Throttle Valve)			498977 Jet—Main (High Altitude) (Used Before Code Date 02110100).			127A •694468 Plug—Welch (3/8" Diameter)
97	690024	Shaft—Throttle			Used on Type No(s). 0109, 0119, 0124, 0213.			127B 691585 Plug—Welch
98	398185	Kit—Idle Speed (Carburetor)			———— Note ——			
98A	493280	Kit—Idle Speed (Control Bracket)			♦ Included in Carburetor Gasket Set—Ref. No. 977.			
104	•691242	Pin—Float Hinge			◊ Included in Valve Gasket Set—Ref. No 1095.			
108A	691182	Valve—Choke .223" Diameter Holes, Stamped 223471)						
108B	692567	Valve—Choke .156" Diameter Holes, Stamped 224449)						

\* Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

♦ Included in Carburetor Gasket Set—Ref. No. 977.

◊ Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
6217-12      Assemblies include all parts shown in frames.      7C-1/2003

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
130 130A	691181 691203	Valve—Throttle Valve—Throttle Used on Type No(s). 0120, 0133, 0135, 0137, 0138.	184	691685	Screw (Muffler Strap)	222B	694263	Bracket—Control (Used Before Code Date 99070500). Used on Type No(s). 0036, 0101, 0111, 0113.
133	398187	Float—Carburetor	186	692317	Connector—Hose	222C	696288	Bracket—Control Used on Type No(s).
134	•398188	Kit—Needle/Seat	187	691050	Line—Fuel (Straight) (Cut to Required Length)	227	692573	Lever—Governor Control
137	•♦693981	Gasket—Float Bowl	187A	692601	Line—Fuel (Molded)	238	691300	Cap—Valve
146	690979	Key—Timing	187B	693401	Line—Fuel (Molded)	240A	298090	Filter—Fuel
155	698214	Plate—Cylinder Head	188	690877	Screw (Control Bracket)	265	691024	Clamp—Casing
161	692579	Base—Air Cleaner (Flat Panel Air Cleaner) (Used Before Code Date 02100800).	190	692127	Screw (Fuel Tank)	267	692577	Screw (Casing Clamp)
	<b>Note</b>		190A	690877	Screw (Fuel Tank) (Used Before Code Date 99070500).	268	691025	Casing—Control Wire (72" Long) (Cut to Required Length)
163	•♦272948	Gasket—Air Cleaner (Flat Panel) (Used Before Code Date 02100800).	192	694543	Adjustor—Rocker Arm	269	691026	Wire—Control (78" Long) (Cut to Required Length)
163A	•♦693458	Gasket—Air Cleaner (High Mount) (Used Before Code Date 02110100). Used on Type No(s). 0109, 0119, 0124, 0213.	209	692571	Spring—Governor (Silver)	270	691027	Nut (Control Wire Casing)
163B	696024	Gasket—Air Cleaner (Flat Panel Air Cleaner) (Used After Code Date 02100700).		<b>Note</b>		271	691028	Lever—Control
163C	696979	Gasket—Air Cleaner (High Mount) (Used After Code Date 02103100). Used on Type No(s). 0109, 0119, 0124, 0213.	209A	691278	Spring—Governor	271A	695743	Lever—Control
			219	693578	Gear—Governor	271B	694256	Lever—Control
			220	691724	Washer (Governor Gear)	276	•♦271716	Washer—Sealing
			222	695742	Bracket—Control	281	694252	Panel—Control (Used After Code Date 99070400).
			222A	694253	Bracket—Control	281A	693407	Panel—Control (Used Before Code Date 99070500).
				<b>Note</b>		285	692595	Strap—Muffler
						286	698611	Module—Oil Sensor (Used After Code Date 03010500).
				<b>Note</b>			698317 Module—Oil Sensor (Used Before Code Date 03010600).	

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

Ø Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
**6217-13**      Assemblies include all parts shown in frames.      **7C-1/2003**

# 120400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
300	695735	Muffler (Lo Tone)	317	695494	Cover-Starter	356C	695630	Stop Wire (1 Wire, 6-1/2" Long)
300A	694429	Muffler (Super Lo Tone)	318	693609	Screw (Mounting Bracket)	358	695155	(Push-On Female Blade Terminal, And Ring Terminal)
300B	693593	Muffler (Lo Tone)	318A	690370	Screw (Mounting Bracket)	358A	697000	Gasket Set-Engine (High Vent)
304	697910	Housing-Blower (Electric Start) (Black) (Used After Code Date 02021400). Used on Type No(s). 0121, 0130.	332	690662	Nut (Flywheel)	363	19069	Flywheel Puller
		_____ Note _____	333	695711	Armature-Magneto	364	695693	Terminal-Oil Plug
		694378 Housing- Blower (Electric Start) (Black) (Used Before Code Date 02021500). Used on Type No(s). 0121, 0130.	334	691061	Screw (Magneto Armature)	365	692568	Screw (Carburetor)
		_____ Note _____	337	491055	Plug-Spark _____ Note _____	383	19374	Wrench-Spark Plug
		691043 Plug-Spark Used on Type No(s). 0124, 0128, 0130.	347	696213	Switch-Rocker (3 Tines, No ON/OFF Marking, 3 Position, Non-Lighted)	415	693463	Plug (Crankcase Cover/ Sump)
304A	697909	Housing-Blower (Rewind Start) (Black) (Used After Code Date 02021400).	356	693650	Switch-Rocker (2 Tines, ON/OFF Marking, 2 Position, Non-Lighted)	425	692583	Screw (Air Cleaner Cover)
		_____ Note _____	356	693650	Wire-Stop (1 Wire, 6-1/4" Long) (Ring Terminal, And Push-On Insulated Pin Socket)	427	694255	Nut (Control Bracket) (Used After Code Date 99070400).
		693621 Housing- Blower (Rewind Start) (Black) (Used Before Code Date 02021500).	356A	692390	Stop Wire (1 Wire, 17" Long) (Snap Connect Insulated Female Blade Terminal, And Bare Wire End)	427A	692575	Nut (Control Bracket) (Used Before Code Date 99070500).
305	690960	Screw (Blower Housing)	356B	692602	Stop Wire (1 Wire, 14" Long) (Snap Connect Insulated Female Blade Terminal, And Insulated Push-On Female Blade Terminal)	441	694262	Bracket-Oil Fill
305A	691140	Screw (Blower Housing)				445	491588	Filter-Air Cleaner Cartridge (Flat Panel)
306	693610	Shield-Cylinder				445A	697029	Filter-Air Cleaner Cartridge (High Mount)
307	690345	Screw (Cylinder Shield)				449	691693	Screw (Oil Fill Bracket)
309	694504	Motor-Starter				455	692591	Cup-Flywheel
310	690323	Bolt (Starter Motor)				456	692299	Plate-Pawl Friction
311	497608	Brush Set				459	281505	Pawl-Ratchet
						467	691668	Knob-Air Cleaner
						474	694457	Alternator
						478	693709	Panel (Used Before Code Date 99070500).
						485	695755	Knob-Control
						493	693599	Bracket-Mounting

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**6217-14**      Assemblies include all parts shown in frames.      **7C-1/2003**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
504	694254	Washer Set—Friction (Used After Code Date 99070400).	619	691108	Screw (Cylinder Head Plate)			695087 Gear—Timing Used on Type No(s). 0124, 0135.
504A	495659	Washer Set—Friction (Used Before Code Date 99070500).	621	692310	Switch—Stop	742	692564	Retainer—E Ring (Idler Gear)
505	691251	Nut (Governor Control Lever)	632	693408	Spring/Link— Mechanical Governor	746	692566	Gear—Idler
510	499308	Drive—Starter	633	•♦693867	Seal—Choke/Throttle Shaft	773	694258	Retainer (Control Bracket)
513	692024	Clutch—Drive	633A	•♦691321	Seal—Choke/Throttle Shaft	783	692353	Gear—Pinion
522	697689	Plug—Dipstick/Fill	635	692076	Boot—Spark Plug	792	694259	Bracket—Fixed Speed (Used After Code Date 99070400).
523	693618	Dipstick	635A	692927	Boot—Spark Plug	797	691029	Nut (Brush Retainer)
524	281370	Seal—Dipstick Tube	652	691108	Screw (Support Bracket)	799	693609	Screw (Oil Sensor)
527	690394	Clamp—Tube	652A	695629	Screw (Support Bracket)	801	694482	Cap—Drive
544	692966	Armature—Starter	663	694593	Screw (Control Panel)	802	691286	Cap—End
552	692346	Bushing—Governor Crank	668	693604	Spacer (Oil Sensor)	803	693757	Housing—Starter
562	94852	Bolt (Governor Control Lever)	668A	694257	Spacer (Control Bracket)	819	691685	Screw (Muffler Bracket)
564	692577	Screw (Control Cover)	675	691261	Washer (Brush Retainer)	823	691665	Screw (Muffler Adapter)
564A	692198	Screw (Control Cover)	676	393757	Deflector—Muffler (Side Out)	824	696017	Shield—Heat
592	690800	Nut (Rewind Starter)	676B	395700	Deflector—Muffler (Direct Out)	830	694544	Stud (Rocker Arm)
597	691696	Screw (Pawl Friction Plate)	677	690661	Screw (Muffler Deflector)	832	693583	Guard—Muffler (Lo Tone)
598	220624	Shim—Endplay	689	691855	Spring—Friction (Rewind Starter)	832A	694459	Guard—Muffler (Super Lo Tone)
601	95162	Clamp—Hose	692	690572	Spring—Detent	832C	697818	Guard—Muffler
604	696078	Cover—Control	697	690372	Screw (Drive Cap) (Starter Motor)	836	690661	Screw (Muffler Guard)
	697326	Cover—Control 0124, 0135, 0145.	714	693649	Nut (Stop Wire)	836A	693624	Screw (Muffler Guard)
608	693394	Starter—Rewind	717	693462	Bracket—Air Cleaner	836B	691003	Screw (Muffler Guard)
	697549	Starter—Re- wind Used on Type No(s). 0139.	718	690959	Pin—Locating	836C	691665	Screw (Muffler Guard)
613	691665	Screw (Muffler)	727	694467	Cover—Starter Drive Used on Type No(s). 0121, 0130.	842	691031	Seal—O Ring (Dipstick Tube)
613A	694460	Screw (Muffler)	729	694371	Clip—Wire	843	694061	Sleeve—Lever
613B	691108	Screw (Muffler)	736	693560	Nut—Clip (Fuel Tank) (Used Before Code Date 99070500).	847	693617	Dipstick/Tube Assembly
615	692576	Retainer—Governor Shaft	741	692565	Gear—Timing ——— Note ———	851	493880	Terminal—Spark Plug
616	692547	Crank—Governor				863	692596	Bracket—Muffler
						864	694430	Adapter—Muffler
						868	★Ø692044	Seal—Valve

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

Ø Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
**6217-15**      Assemblies include all parts shown in frames.      **7C-1/2003**

# 120400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
875	<b>693459</b>	Base—Air Cleaner (Plastic High Mount) (Used Before Code Date 02110100). Used on Type No(s). 0109, 0119, 0124, 0213.	967	<b>493537</b>	Filter—Pre Cleaner (Flat Panel)			<b>Note</b>
875A	<b>697030</b>	Base—Air Cleaner (Plastic High Mount) (Used After Code Date 02103100). Used on Type No(s). 0109, 0119, 0124, 0213.	967A	<b>273356</b>	Filter—Pre Cleaner (High Mount)			<b>690035</b> Kit—Label (Used Before Code Date 97082800).
883	<b>691893</b>	Gasket—Exhaust (Adapter to Cylinder)	968	<b>692584</b>	Cover—Air Cleaner (Flat Panel Air Cleaner)			<b>1022</b> $\star\emptyset$ <b>691890</b> Gasket—Rocker Cover
883A	<b>692237</b>	Gasket—Exhaust			<b>698811</b> Cover—Air Cleaner (Flat Panel Air Cleaner)			<b>1023</b> <b>499924</b> Cover—Rocker Arm
890	<b>694933</b>	Bracket—Support			Used on Type No(s). 0145.			<b>1026</b> <b>693517</b> Rod—Push
914	<b>692198</b>	Screw (Rocker Cover)	968A	<b>693460</b>	Cover—Air Cleaner (High Mount Air Cleaner)			<b>1029</b> <b>691230</b> Arm—Rocker
914A	<b>692557</b>	Screw (Rocker Cover)	971	<b>690370</b>	Screw (Air Cleaner Base)			<b>1034</b> <b>691343</b> Guide—Push Rod
957	<b>694261</b>	Cap—Fuel Tank (Used After Code Date 99070400).	971A	<b>690349</b>	Screw (Air Cleaner Base)			<b>1036</b> <b>697004</b> Label—Emission (Used After Code Date 01100800).
		<b>Note</b>	971B	<b>691693</b>	Screw (Air Cleaner Base)			<b>Note</b>
		<b>493988</b> Cap—Fuel Tank (Used Before Code Date 99070500).	972	<b>694260</b>	Tank—Fuel (Used After Code Date 99070400).			<b>696766</b> Label—Emission (Used Before Code Date 01100700).
			972A	<b>694263</b>	Tank—Fuel (Used Before Code Date 99070500).			<b>1051</b> <b>691265</b> Ring—Retaining (Starter Drive)
			975	<b>493640</b>	Bowl—Float			<b>1052</b> <b>698674</b> Sensor—Oil
958	<b>692586</b>	Valve—Fuel Shut Off	977	<b>695156</b>	Gasket Set—Carburetor			<b>1054</b> <b>280275</b> Tie—Cable
961	<b>693598</b>	Screw (Air Cleaner Bracket) (Used Before Code Date 02080500)	977A	<b>697001</b>	Gasket Set—Carburetor (High Vent)			<b>1058</b> <b>275092</b> Owner's Manual (Emission Engines)
		<b>Note</b>	993 $\star\emptyset$ <b>694088</b>		Gasket—Cylinder Head Plate			<b>1070</b> <b>692590</b> Screw (Flywheel Fan)
		<b>698304</b> Screw (Air Cleaner Bracket) (Used After Code Date 02080400).	994C	<b>697817</b>	Arrester—Spark (Used After Code Date 02031800).			<b>1090</b> <b>691293</b> Retainer—Brush
					Used on Type No(s). 0135.			<b>1095</b> <b>695289</b> Gasket Set—Valve
			1005	<b>692592</b>	Fan—Flywheel			<b>1113</b> <b>692577</b> Screw (Panel)
			1019	<b>694852</b>	Kit—Label (Used After Code Date 97082700).			<b>1119</b> <b>691183</b> Screw (Alternator)
								<b>1172</b> <b>691676</b> Screw (Fixed Speed Bracket)
								<b>1210</b> <b>498144</b> Pulley/Spring Assembly (Pulley)
								<b>1211</b> <b>498144</b> Pulley/Spring Assembly (Spring)
								<b>1230</b> <b>695709</b> Stud (Control Bracket)
								<b>1305</b> <b>691140</b> Screw (Oil Sensor Module)

★ Included in Engine Gasket Set—Ref. No.358.

● Included in Carburetor Overhaul Kit—Ref. No. 121.

◆ Included in Carburetor Gasket Set—Ref. No. 977.

∅ Included in Valve Gasket Set—Ref. No 1095.

*Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.*  
**6217-16**      Assemblies include all parts shown in frames.      **7C-1/2003**